

## Important Information About Microwave Popcorn Feature

In order for microwave popcorn to 'pop' evenly and avoid burning, the bag must be able to rotate freely inside the oven while cooking.

Some brands of microwave popcorn bags are larger than others and these larger bags may get stuck inside the oven in one position even though the platter is turning properly. This will result in uneven cooking or burning of the popcorn.

To avoid this, please watch the bag until popping is completed. If the bag gets stuck and does not rotate, open the door, reposition the bag and re-start the oven.

*CAUTION: Use an oven mitt or pot holder when moving the bag, as the contents can be very hot.*